

# Instruction Manual For Bluetooth Battery Charger and Tester CAT-100

#### 1、Specifications

| Input               | 100VAC-240VAC; |
|---------------------|----------------|
| Output              | 14.70V;        |
| Мах                 | 3A;            |
| Working temperature | -20℃- +50℃;    |


Tips: 1, If not to connect Bluetooth during use, this tester will automatically charge after ten minutes 2, It's suitable for all 12V battery sizes (Charging function)

#### **Battery Chemistries :**

Regular flooded ,AGM, GEL,EFB, Lithium



#### 2、Introduction

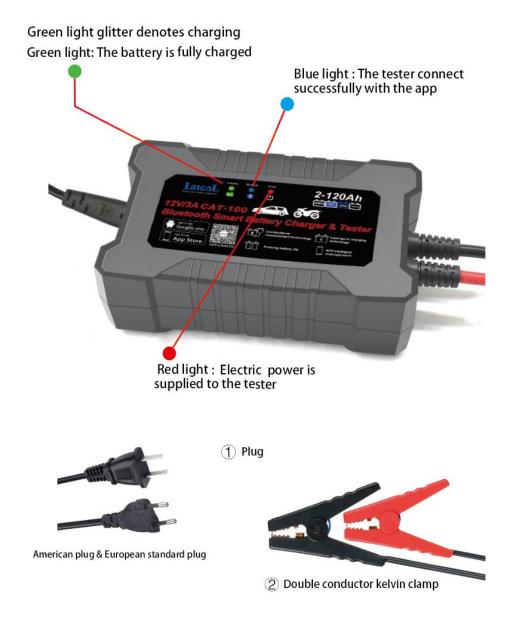

#### 3、How to connect CAT-100



1.Connect the red clamp to positive terminal and the black clamp to negative terminal of the battery then plug in AC Power




2.Where to download the APP "LANCOL Battery Tester"?



3.Turn on Bluetooth and GPS location on your phone



4.Enter "select Bluetooth tester"

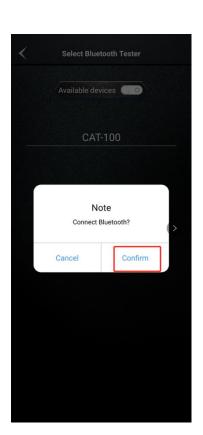


5.Select the Bluetooth name of the devices and click "Confirm"



6. The blue light on indicates that the connection is successfully.

## **Function 1: Battery Test**

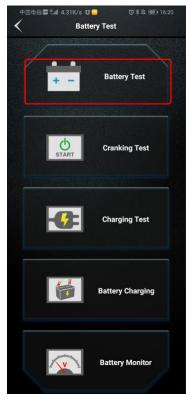


1. Click Battery Test



4.Battery test results



2. Check battery standard

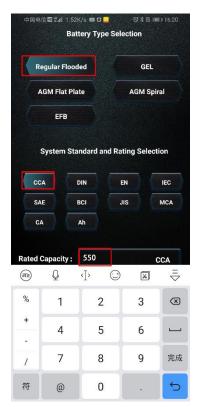

3.Select the battery type and input rated capacity

## **Function 2: Cranking Test**




1.Click Cranking Test


## **Function 3: Charging Test**




1.Click Charging Test

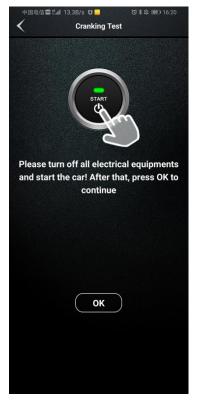


2.Start the engine then press the OK

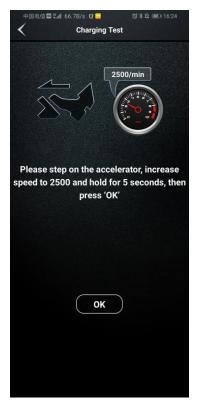

2.Speed up the engine to 2500 turns, and keep 5 seconds

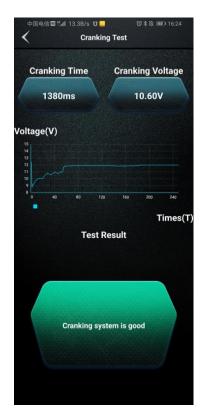

3.Cranking test results

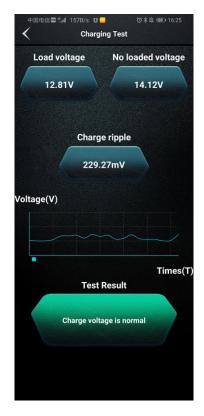

3.Charging test results

## **Function 4: Battery Charging**



1. Click Battery Charging

| Battery Charging Managem | nent 🔅      |  |  |  |
|--------------------------|-------------|--|--|--|
|                          |             |  |  |  |
| < SETING                 |             |  |  |  |
| AUTO                     |             |  |  |  |
| Battery Type             |             |  |  |  |
|                          | 0           |  |  |  |
| GEL                      | •<br>•<br>• |  |  |  |
| AGM                      | 0           |  |  |  |
| EFB                      | 0           |  |  |  |
| Lithium                  | 0           |  |  |  |
| Charging Current         |             |  |  |  |
|                          | 0           |  |  |  |
| 2A                       | <b>O</b>    |  |  |  |
| 1A                       | 0           |  |  |  |
| CONFIRM                  |             |  |  |  |
|                          |             |  |  |  |

2.Select battery type and charging Current manually / automatically




3.Turn on the charging switch



4. green light glitter denotes charging


## **Function 5: Battery Monitor**

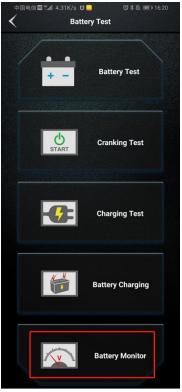

1. Click Battery Monitor

| 中国电信電 端 0.00K/s ひ 🕒 の 水 ಭ 👀 16:28<br>K Battery Monitor |            |              |        |  |
|--|------------|--------------|--------|--|
| Battery  | / Capacity | Battery Volt | oltage |  |
|  | Choos      | e time       |        |  |
| Set s  | hour       | minute       | ecord  |  |
| Volta  |            | 20           |        |  |
| 28   | 0-         | -30          |        |  |
|  |            | 40           |        |  |
| 16<br>12<br>16:27                                      | Cancel     | Confirm      | 16.32  |  |
|  |            |              |        |  |
| Historical record Real time voltage                    |            |              |        |  |
|  |            |              |        |  |
|  |            |              |        |  |

2. Choose time

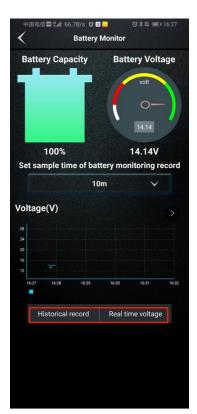

3.View historical record and real time voltage

Safety Protection

- 1、 Protected against polarity reversal(The devices will not work with wrong connection)
- 2、Temperature protection(Built-in temperature fuse, the device will power off automatically once the temperature is too high )
- 3、 Leakage Protection(Power off automatically when the test clip is removed)
- 4、 ABS flameresistant material
- 5、 This product has no function of waterproof. Do not use it outdoors in rainy day.

#### After-sale warranty

About the operation step and parameters, please log in the official website

(www.lancol.com) to download the relative information.

1.One year warranty

2.The product passed CE, RoHS certification with quality and safety assurance E-mail:sales@lancol.com Tel:+86-28-85272353

Add:550# Gangda Avenue, North Section, Modern Industral Port, Pixian, Chengdu, China Technical support:+86-13881741131